
## **WIRING DIAGRAM**

## ER 100 G



## **ER 100 G**

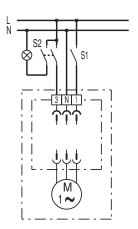

S1 = Base load (low speed)

S2 = Full load (high speed)